


8kg Integrated Auto Change-Over Regulator Kit

Model No. AXS-8B-K

INSTALLATION INSTRUCTIONS

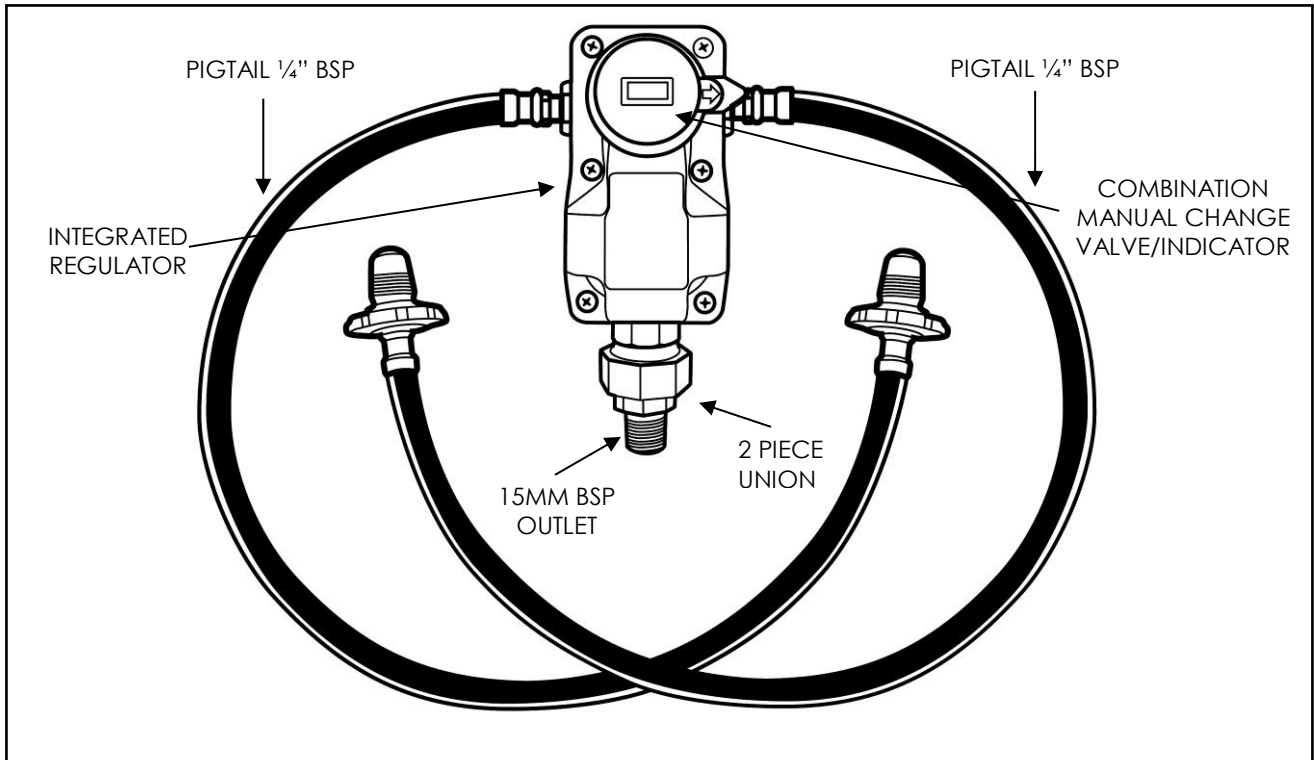


1. Assemble as per drawing ensuring that all joints are sealed with an approved joint sealer.
2. Use approved Pigtails enclosed.
3. Ensure the regulator points downward.
4. Check all joints and fittings under pressure for leaks.

Aber recommends that the above regulator is fitted with a condensate trap to comply with the LPGA Code of Practice COP1 (installation and servicing of cylinders and regulators). Copies are available on request.

Regulator Rain Cover FITTING INSTRUCTIONS

The fasteners supplied with this cover are designed for use with masonry walls only. For other cladding use appropriate fixings.

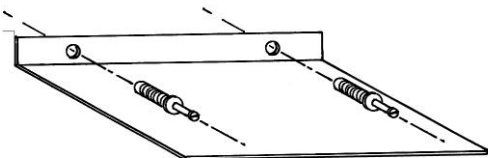

Fit Rain Cover approximately 90mm above top of regulator to ensure access to indicator.

If painting the Rain Cover an etch primer is required as it is galvanised.

